



## UNi-Pak Tray Closing Instructions

CSC Form QA-FM-L267 Rev. 2 Date 08/07/02 Page 1 of 2

1. Verify that the gasket is securely attached to the Tray.
2. Position the tray into the filled pail as shown.
3. Fill Tray with designated material.
4. Place the Hiperform Liner cover on top of the pail.
5. Position the closing tool on top of the Hiperform Liner cover. The jaws of the closing tool should be centered between the lugs. Apply downward pressure on the closing tool to ensure that the eye lugs are below the curl of the pail.
6. **For Automated / In-line Closing Tool:**
  - a. Check that the tool is centered evenly on top of the cover.
  - b. Once the crimping cycle is complete, verify that the lugs of the cover are completely tucked under the curl of the pail.

### **For Pneumatic Semi-Automatic Tool:**

- a. Adjust the air pressure to the recommended 100psi. Connect the air line to the closing tool.
- b. Press and hold the actuator buttons until crimping operation is complete.
- c. Turn the closing tool 90° and repeat step b.
- d. Once the crimping cycle is complete, verify that the lugs of the cover are completely tucked under the curl of the pail.

Signature: \_\_\_\_\_

A handwritten signature in black ink, appearing to read "Michael J. De...".



# UNi-Pak Tray Closing Instructions


CSC Form QA-FM-L267

Rev. 2


Date 08/07/02

Page 2 of 2


4. HYPERFORM LINER COVER →

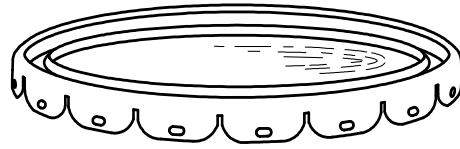

3. TRAY →

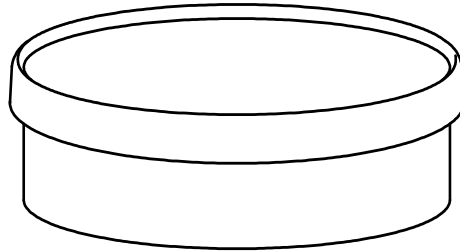

2. GASKET →

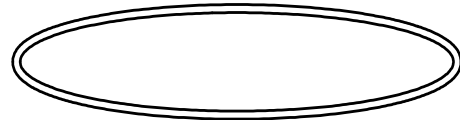

1. STEEL OVERPACK (PAIL) →

